

Systeme für Aquakultur,
Aquaristik, Labore und
zur Wasseraufbereitung

Systems for aqua culture,
sea water aquaria, labs and
water desalination and purification

Systèmes pour aquacultur,
aquariums eau de mer,
laboratoires et traitements d'eau



AquaCare GmbH & Co. KG
Am Wiesenbusch 11
D-45966 Gladbeck
Tel.: +49-2043-375758-0
Fax: +49-2043-375758-90
<http://www.aquacare.de>
e-mail: info@aquacare.de

Instruction Manual De-nitrification filter ADN size 400 and larger



modification possible

Content

1.	Safety Instructions	3
1.1.	General information	3
1.2.	Indication of information	3
1.3.	Qualification of the personnel.....	3
1.4.	Dangers if safety information are not minded	3
1.5.	Safe working	3
1.6.	Safety information for the operator	3
1.7.	Safety information for maintaining and assembling personnel	3
1.8.	Arbitrary reconstruction and spare parts production	3
1.9.	Illegal operation	4
1.10.	Linked aggregates	4
2.	Transport	4
2.1.	Mechanical conditions	4
3.	Designated use	4
4.	Configuration	4
4.1.	Basic equipment.....	5
5.	Principle of function	5
6.	Installation	6
6.1.	Assembly.....	6
6.2.	Water connectors	6
6.3.	Electrical connection.....	6
6.4.	Filling up with sulphur granules	6
7.	Start up the unit	7
7.1.	Filling up with water	7
7.2.	Adjusting the water flows	7
7.3.	Adjusting the times for flushing and interval	7
7.4.	Adjusting the feed flow during the starting phase	7
7.5.	Adjusting the right feed flow during normal operation	8
7.6.	Important parameters during operation of the ADN filter	8
8.	Shut down the unit	8
9.	Maintain the unit	9
9.1.	Strainer.....	9
9.2.	Flushing time	9
9.3.	Circulation pump	9
9.4.	Refilling the sulphur granules.....	9
9.5.	ORP sensor.....	9
10.	Trouble shooting	9
10.1.	The filter bed is blocked	9
10.2.	Pump shuts down / malfunction.....	9
10.3.	Nitrate is not eliminated.....	10
10.4.	The outlet water stinks of hydrogen sulfide.....	10
11.	Warranty	10
12.	Technical data and unit protocol	11
13.	Appendix: Declaration of Conformity	12
14.	Appendix: pump	13

1. Safety Instructions

1.1. General information

This manual contains basic information that are important for assembly, operation, and maintenance. This should be read before mounting by the assembly operator and the responsible operator and/or qualified personnel. This instruction must be disposable the at unit at any time.

Pay attention to this safety instruction as well as to the special instructions within the other chapters. In addition local laws and safety instruction must be minded.

1.2. Indication of information



If safety information are important for life or health for persons they are marked with the relevant hazard symbol according DIN 4844-W9.



Safety information marked with this symbol can cause danger for the machine and its function if not respected.



This hints can ease the work with the machine and its maintenance.

At the machine directly marked information as rotation arrow, fluid connections and setting points should be noticed. These marks should be readable at any time.

1.3. Qualification of the personnel

The staff for operation, maintaining, inspection and assembly must be qualified for these work. Responsibility and controlling of the personnel should be directed by the operator.

1.4. Dangers if safety information are not minded

If safety information are not minded persons, environment, and the machine can be endangered. Failure of observe lead to loss of the warranty.

Failure of observe can coarse:

- Failure of important functions of the machine.

- Failure of stipulated methods for maintenance.
- Endanger of persons with electric, chemical or mechanical impacts.

1.5. Safe working

Working with the machine is only allowed if all safety information of this manual, national laws and rules for preventing accidents and internal working, operating and safety rules of the operator must be minded.

1.6. Safety information for the operator

Contact protection for rotating or moving parts should not be removed while operation.

Risks of electrical energy must be averted. Please pay attention to the local laws and information, too.

1.7. Safety information for maintaining and assembling personnel

The operator must take care that all works for assembling, inspecting and maintaining are made by authorized and qualified personnel. These persons must be informed about the machine and the works by reading the manual or otherwise.

Working at the machine is only permitted if unit is out of operation. The described procedure of putting out of operation must be redeemed. Immediately after the work safety and protection facilities must be mounted and put into function.

Before starting again all issues treated in the chapter “putting into operation” must be minded.

1.8. Arbitrary reconstruction and spare parts production

Reconstruction or modifying the unit are only proper if the manufacture agrees. Original spare parts and authorized accessories by the manufacture are made for the safety. The use of other parts can destroy the warranty demands.

1.9. Illegal operation

Safety is only guaranteed if the unit is running within the field of application described in „designated use“ in this manual. The technical limits mentioned in manual (chapter “Technical data and unit protocol”) must be redeemed.

1.10. Linked aggregates

The listed information dealing with safety and operation in manuals of linked aggregates must be redeemed, too.

2. Transport

2.1. Mechanical conditions



The unit may transported only with suitable lifting tools. Pay attention to the transport weight listed in chapter “Technical data and unit protocol”.

Do not tilt the unit more than 10% out of the horizontal position.

Before transporting the unit it must be totally empty (this does not apply to the filter bed granules).

3. Designated use


AquaCare de-nitrifying filter are only made for aquaria and aqua culture units. The water in these tanks should never exceed 35,000 TDS. The lower the pH the lower the efficiency. Other purposes are only allowed after consultation with AquaCare. If water temperatures are below 15°C the filter must be dimensioned bigger.

4. Configuration

The AquaCare de-nitrifying filter AND is completely equipped. The unit has to be connected to the water tank and to the power supply. Please control the delivery if it is complete and not broken.

All ADNs are equipped with an automatic flushing device.

4.1. Basic equipment

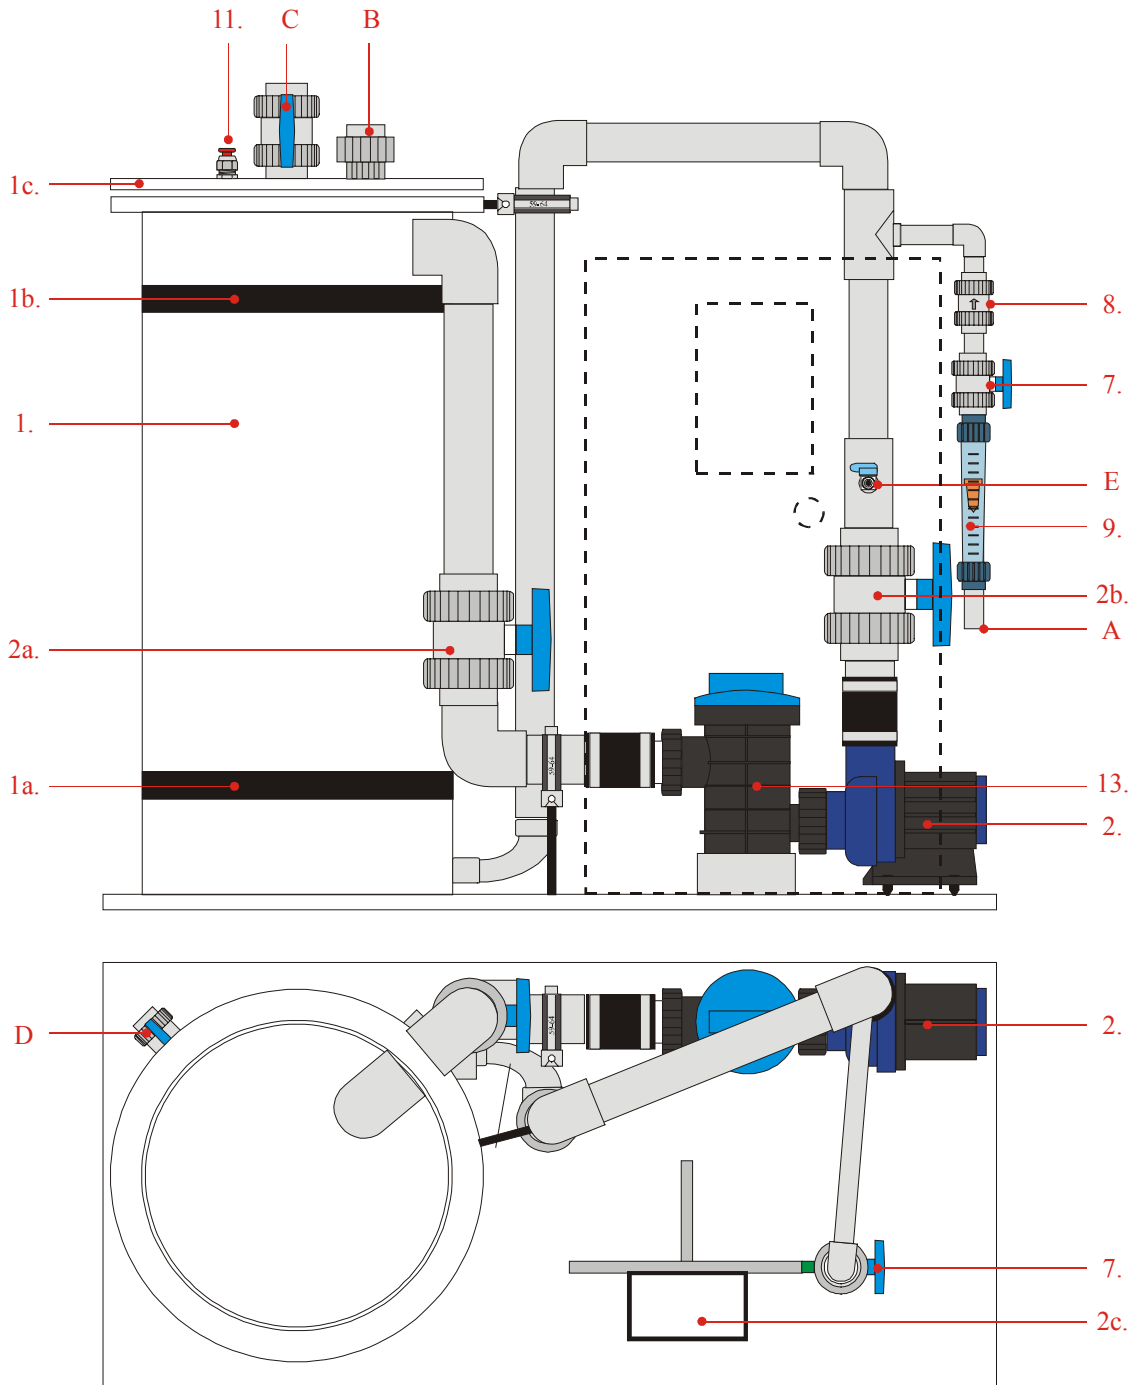

The unit is mounted on a rigid PVC-U mounting plate and consists of:

- 1. filter housing with sulphur granules (filter bed), 1a. lower strainer, 1b. upper strainer with filter foam, 1c. filter cap;
- 2. circulation pump, 2a. inlet ball valve, 2b. outlet ball valve;
- 7. ball valve for feed water;
- 8. check valve for feed water;
- 9. flow meter for feed water;
- 11. connector for ORP sensor;
- 13. strainer (only size 400)

- A. feed (from aquarium);
- B. outlet (to aquarium);
- C. drain (during additional flushing mode);
- D. drain

5. Principle of function

The filter bed granules made of sulphur serve as growth bodies for bacteria. As the same time the sulphur is food for these specialized bacteria. Is

any oxygen in the filter the bacteria are able to take nitrate as an oxygen source. During this process gaseous nitrogen is generated (forming small bubbles). This process is called de-nitrification. The ADN filter does not need additional food in form of a C-source and therefore any expensive ORP control is necessary. Trace elements - especially iron - should be in the water! Maybe you have to dose them regularly.

As a by-product gypsum (white coating) and bacteria agglomeration can be produced. Both substances are harmless in the produced concentrations.

The whole unit should be flushed automatically (timer program B). The flushing process looses the filter bed to prevent blocking and channel forming that minders the efficiency of the biological process. Additional excessive bacteria will be washed out. You may adjust flushing time an interval depending on nitrate concentration in the tank.

The outlet water should flow back ideally into the feed flow of a skimmer. Therewith the water gets back the lost oxygen and the organic substances (residues of bacteria) produced by the ADN filter will be flotated by the skimmer.

Because the ADN filter works with autotrophic growing bacteria - likewise nitrifying bacteria (oxidation of ammonia and nitrite to nitrate) – the biological start up time can need 1-10 weeks

6. Installation

6.1. Assembly



To guarantee a faultlessly operation of the filter the unit should be erected on an even and stable ground. Uneven parts of the floor must be flattened with floor pavement or a suitable base.

6.2. Water connectors

To operate the unit you must install water and electrical connections.



The connection with PVC-U must be glued only with approved adhesion. The processing regulation of the adhesion should be minded.

Connect the feed water (A.) with a inlet pump or a bypass (e.g. from a skimmer). The feed water volume is noticed in the chapter “technical data and protocol”.

Connect the outlet water (B.) with the aquarium or ideally with the inlet of a skimmer. Water cannot flow back because of the built-in check valve (8.).

The ball valve (C.) is an extra outlet for the intensive flushing process (only with manually flushing). If you use this connection washed out bacteria and dirt will be drained directly without polluting the aquarium water circuit.

You can take samples for analyzing the nitrate concentration at the sample valve (E.) during operation.

6.3. Electrical connection

The electrical connection must be done by authorized and qualified persons according with the local regulation only.



Before opening a terminal box and before every disassembling of electrical components the supply voltage must be disconnected at all phases (contact opening minimum 3 mm).

The electrical supply must be conform with the data at the rating plate. The filter and the pump must be protected with fuses.

6.4. Filling up with sulphur granules

If the ADN-filter is not delivered with the sulphur granules before starting up you must fill the filter bed. The sulphur must be very pure: minimum 99,5%, the granulation between 3 and 10 mm.

Open the filter by loosening the plastic (or stainless steel) screws of the cap (1c.). Just as well do it with the upper strainer (1b.). Now take out the upper strainer and the blue filter sponge.

Make sure that the lower strainer (1a.) is placed correctly and fixed with the plastic screws. The tube in the middle must sit tight in the central lo-

cator. For open it you have to turn counterclockwise.



Now fill in the filter granules as far as the mark "maximum filling". Take only proper material (e.g. AquaCare sulphur granules).



Put filter sponge and upper strainer back into the filter and fix them with the plastic screws. Never forget these both components. Otherwise the pump soaks granules into the inlet and get damaged.



Tighten plastic bolts with maximum 3 Nm. Higher forces destroy screws and the threads.

7. Start up the unit



Before start up the unit check out of all connections are done well. Make sure that all PVC-unions are tight and their o-ring seals are in the correct position.



Check out if the electrical connection is made correctly.

7.1. Filling up with water

Now fill up the system with water by opening the ball valve (7.) an the inlet (A.).

For filling up the system completely with water open the sample valve (E.) until water comes out.

Start the pump as shown in its manual.

Choose timer B.

7.2. Adjusting the water flows

Circulation water flow and flushing water flow are adjusted at the pump controller. The pre-settings are shown in the below table. For changing the settings please look at the pump manual.

ADN size	400	600	1000	1500
Built-in pump type BlueEco	320	500	1500	2200
Chosen timer	B	B	B	B
Programming				
Start Time	00:00	00:00		
Speed 1	2200	1500		
Mid Time 1	12:00	12:00		
Speed 2	3000	1950		
Mid Time 2	12:30	12:30		
Speed 3	2200	1500		
Mid Time 3	23:30	23:30		
Speed 4	3000	1950		
Stop Time	23:59	23:59		
Repeat	enable	enable		

Attention! The „Start Time“ should be 00:00; the "Stop Time" should be 23:59; "Repeat" should be set on "enable" at any time.

The maximum rotation of BlueEco pumps is at 3000 rpm. It is reduced if the maximum power input is reached.

The circulation water flow should be adjusted in that way that the sulfur granules are not moving.

The flushing water flow should be adjusted in that way that the sulfur bed floats.

7.3. Adjusting the times for flushing and interval

Flushing and interval time at set at the controller.



The interval time should never be below 10 minutes.

Flushing time and interval time should be adjusted in that way that the filter bed never blocks. The values in the above table should never undercut.

7.4. Adjusting the feed flow during the starting phase

To adjust the feed flow use the ball valve (7.) and read the water flow meter (9.).

Start the ADN-filter with the lowest water flow shown at the flow meter (see below table).

ADN size	400	600	1000	1500
feed water flow in l/h	100	250	600	1500

During the start up phase measure the nitrate concentration in the ADN-filter every week, please. You can take water sample at the sample valve (E.).

If the nitrate concentration trends towards zero double the feed water flow. During the start up time nitrite can accrue. These concentrations are not dangerous because on the one hand the feed flow (outlet flow) of the ADN-filter is only a small part in the allover conventional filter flow volume and on the other hand the nitrite will be oxidizes very fast by the bio-filter or ozone driven skimmers.

Attention! Some nitrate tests show wrong results with oxygen-free water.



The start up time takes 1 to 10 weeks, sometime longer. This time depends on the fact if the specializes sulphur oxidizing bacteria are available in the aquarium water or not. To accelerate the process it is possible to inoculate bacteria of an already running ADN-filter. Put the bacteria covered old granules into the new filter. Bacteria grown in conventional driven denitrifying filter are not suitable for the ADN. Conventional filters are fed with organic source like alcohol, organic acids, sugar, PHB.

Another parameter for estimating the efficiency of the filter is the ORP. To measure it the ADN-filter is equipped with an ORP connector in the filter cap (1c.). Open the union nut of the sensor connector (11.) and pull out the red plug. Instead of the plug push an ORP sensor into the connector. Fix the union nut. You can use every ORP sensor with a diameter of 12 mm.



Pay attention to the manual of the ORP sensor and the ORP measuring device. An ORP value is meaningful only after 1 to 2 days. Biologically activated AND-filters have a negative ORP value.

The low the ORP the lower the nitrate concentration.

7.5. Adjusting the right feed flow during normal operation

The definite inlet water flow for the ADN-filters depends on several factors:

- a) **Total volume** of the aquarium: the bigger the tank the higher the inlet flow.
- b) **Total organic load** of the aquarium: the more food you take in the higher the inlet flow.
- c) The lower the **water change rate** the higher the water inlet flow.
- d) The worse the **biological filtration** the higher the water inlet flow.
- e) The higher the **water temperature**, the higher inlet water flows are possible.
- f) The higher the **TDS** (total dissolved solids) the lower the possible maximum water inlet flow.

After the starting phase you can increase the inlet water flow step by step to that value that a significant fall of the nitrate concentration is visible in the aquarium.

If the nitrate concentration in the aquarium is below 5 mg/l the efficiency of the ADN-filter should be lowered. A nitrate concentration about 0 mg/l is not good for the animals and the ADN can produces hydrogen sulfide.

7.6. Important parameters during operation of the ADN filter



Measure the Carbonate hardness (KH, alkalinity, buffer capacity) of the aquarium water once per month. If the KH is falling below 3°dH the ADN must shut down or you must add alkalinity to prevent very low pH values in the aquarium.

For enriching KH, calcium and magnesium AquaCare offers chemicals and units in hobby and technical sizes.

8. Shut down the unit

If you want to shut down the ADN, e.g. if too less nitrate is in the aquarium, please follow the above steps.

1. Flush the ADN thoroughly (therefore use the manual adjustable speed in program "manual").
2. Stop the water inlet flow by closing the inlet water valve (7.).
3. Stop the main circulation pump.
4. Drain the water by opening the drain (D) and the sample valve (E), too.



If the ADN standd still with water for more than one day the bacteria will die and hydrogen sulfide is produced. Hydrogen sulfide is toxic.

9. Maintain the unit

The ADN is a unit that need less maintenance. But for a long and stable function some steps are important.

9.1. Strainer

The strainer (only size 400) before the pump should be cleaned regularly - otherwise the pump gets damaged by cavitation. Shut down water inlet pump and circulation pump. Closed both ball valves 2a and 2b. Drain the pre-filter (strainer) by open the drain screw. Unscrew the transparent cap of the pre-filter and take out the strainer. After cleaning assemble all parts again.

9.2. Flushing time

A high efficiency is only possible if the filter bed has a loose filling and any water channels and blocking exists. Therefore you must flush the filter bed regularly.

If blocking is common you must flush more often and longer.

9.3. Circulation pump

The circulation pump should be cleaned once per year. Therefore shut down the system (inlet pump and circulation pump). Close both ball valve 2a. and 2b. Now the pump is disconnected if you unscrew the lower union nuts of the ball valves.



Never run the pump with closed or reduced ball valve in the soaking side (2a.).



Never start the pump if the whole system is not completely filled with water.

Clean the pump as shown in the pump manual.

9.4. Refilling the sulphur granules

If 1/3 of the granules are consumed fill up the filter again. Therefore shut down the filter (see chapter "shut down the unit" and drain 1/3 of the water by opening the drain ball valve (D.). Fill up the granules as described in chapter "Installation: filling up with sulphure granules".

9.5. ORP sensor

Clean the ORP sensor as described in its manual. The sensor will be overgrown very fast in an denitrification system – so the sensor should be cleaned more often.

10. Trouble shooting

If you cannot eliminate the disturbance ask your service partner or AquaCare.

10.1. The filter bed is blocked

If the ADN system is stressed or too less flushing is realized the filter bed can block.

A. Flush the system intensively with the program "manual". The produced particles and too much bacteria can be flushed out of the system by opening the auxiliary water outlet (C). Do not stop the water inlet.

B. Open the filter (shut down the unit before and drain a part of the water) and take out the upper strainer with filter foam. Loosen the filter bed by pricking with a thin plastic stick.

10.2. Pump shuts down / malfunction

Please look at the pump's manual.

10.3. Nitrate is not eliminated

There are many reasons why nitrate will not be eliminated.

1. **Starting phase is not completed:**
depending on the already existing bacteria flora in the aquarium the starting phase can last a long time. Everything comes to him who waits. - If available inoculate the ADN system with active bacteria from a running ADN system.
2. **Inlet flow is too high:**
at bad operation conditions like low temperature, varying salt concentrations the maximum efficiency cannot be reached. Calibrate the inlet water flow in that way that a significant nitrate reduction is realized.
3. **Filter bed is blocked:**
In a blocked filter bed water channels are forming and the major parts of the filter granules are not supplied with circulation water and the de-nitrification rate decreases. Clean the filter bed thoroughly and increase subsequently the flushing time.
4. **Bacteria inhibiting substances are in the water:**
If you use medicine or other substances that affect bacteria negatively the ADN should be taken out of operation before the treatment starts. After treatment and filtering out the substances with e.g. activated carbon you can start the ADN-filter again.
5. **Missing trace elements:**
In some cases the concentration of trace elements,

especially iron, is too low. Dose a good trace elements solution regularly to supply the bacteria with these essential elements.

10.4. The outlet water stinks of hydrogen sulfide

If the outlet water stinks of hydrogen sulfide the mode of operation must be changed.



Hydrogen sulfide is toxic. Ventilate the room and leave it at once.

Hydrogen sulfide is formed if any nitrate is in the circulation water of the ADN. Increase the water inlet to the ADN to make sure that the outlet water contains a little bit of nitrate.

If very little nitrate is in the aquarium water (below 5 mg/l) you must shut down the ADN system (see chapter "shut down the unit").

To reduce the efficiency of the ADN filter it is possible to take out a big part of the filter bed.

11. Warranty

You have 24 months warranty on all AquaCare units except spare parts like pump bearings and rotors. You have no warranty if parts are broken by violent (for example totally closed water inlet). For consequential losses AquaCare is not liable.

12. Technical data and unit protocol

Kundennr. / customer no.: Oceanarium Morskaya Skazka Mrs. Yana str. Maliska 3 Kiev 02192 Ukraine Tel./phone: Fax: Email: discus@ua.fm Kom. 100 m ³ aquarium	 <p style="text-align: right;">www.aquacare.de </p> AquaCare GmbH & Co. KG - Am Wiesenbusch 11 D-45966 Gladbeck - Germany Tel.: +49-2043-375758-0 - Fax: +49-2043-375758-90 http://www.aquacare.de - e-mail: info@aquacare.de
Type of unit	ADN600
Unit no.	2-2016-000
Dimensions L×W×H	125 × 70 × 140 cm
Empty weight	150 kg
Transport weight	400 kg
Operation weight	500 kg
Max. working pressure	0.1 bar (measured at filter cap height)
Max. feed flow	2500 l/h
Operation temperature	4...30°C
Ambient temperature	4...35°C
Main pump Manufacturer Type Pump-No. Controller-No. Serial No. 1 Serial No. 2 Activation No. 1 Activation No. 2	High efficiency pump with over 90% energy efficiency Estrad BlueEco 500 515103084 515103104 1510 3104 2092 3035
Water connections	Feed water: DN40, d50 PVC Outlet water: DN32, d40 PVC Additional drain: DN32, d40 PVC Drain: DN20, d25 PVC Sample: DN4, d6 tube
Leakage test	57 hours
Running test: circulation speed: flushing speed:	1500 rpm, 0.9 A, 204 W, 130 mbar (at pump) 1900 rpm, 1.9 A, 480 W, 140 mbar (at pump)

Date: 08. August 2016

AquaCare: Mr. B. Ramsch

Customer:

Signature:

.....

13. Appendix: Declaration of Conformity

Declaration of conformity in accordance with EMC directive

The company:

AquaCare GmbH & Co. KG

Am Wiesenbusch 11

D-459566 Gladbeck, Germany


declares, that the product

ADN Denitrification filter with sulfur filter bed

comply with directive
98/37/EEC and
2001/95/EEC
of the European Community.

Gladbeck, 08.08.2016

AquaCare GmbH & Co. KG
* Aquatic Systems Research *
INNOVA-Park, Am Wiesenbusch 11
Tel.: 02043-375758-0 Fax: 375758-90
email: info@aquacare.de
D-45966 Gladbeck



14. Appendix: pump